

Operational manual

# Praktika T-02(K) turnstile





www.oxgard.com info@oxgard.com Тел.+7(812) 366-15-94





# Contents

1.	Product purpose	. 5
2.	Delivery set	. 5
3.	Basic specifications	. 6
4.	Product design	. 7
5.	Transportation and storage	10
6.	Safety requirements	10
	7.1. Card collector purpose	11
	7.2. Product design	12
	7.3. Removing guest cards from card collector	13
8.	Turnstile operation	13
	8.1. Turning on	13
	8.2. Operating modes	14
	8.3.Control with remote control panel	14
	8.4. Adjustment of remote control panel	16
	8.5. Control with card collector	16
A	ppendices. Troubleshooting	20



# List of abbreviations

- FA fire alarm
- RC remote control
- ACS access control system
- OD operating device

Turnstile firmware version FW v1.76 Card collector firmware version FWv1.52



## **1. Product purpose**

**Praktika T-02(K)** turnstile is designed for access control and pedestrian flow management. The turnstile can be used at checkpoints at factories and organizations, institutions, banks, schools, sports and entertainment facilities, shops, railway stations, etc.

To ensure easy and quick passage of people it is recommended to install one turnstile for every 500 people working in one shift.

# 2. Delivery set

Table 1. Delivery set

Item	Qty, pcs.
PraktikaT-02(K) turnstile	1
Remote control panel with cable	1
Hatch lock key	8
Datasheet	1
Installation guidelines	1
Operational manual	1
SORMAT <i>PFG LB</i> 12-50* anchor	6
M12x60 DIN912(GOST 11738-84) hexagon screw *	6
Connecting cable PVA 2x1,5*	1

\*-optional



# 3. Basic specifications

# Table 2 Basic specifications

Description	Turnstile	RC panel
Dimension (HxWxL), (mm) - operational state - collapsed arms	1100x1050x840 1100x1050x340	107x107x25
Weight, kg	66,0	0,5
Temperature range, 0C		
- operation	+1+40	+1+40
- transportation and storage	+1+40	+1+40
Atmosphere relative humidity, no more than %	80	80
Passage width, mm	500	
Throughput, people per minute	30	
Card collector capacity (pcs.) **	More than 500	
Max. number of connected consoles, pcs	2	
Lifetime, years	8	8



Table 3 Electrical specifications

Description	Turnstile	Card collector**	<b>RC</b> panel
Supply voltage, V:			
- nominal	12,0	12,0	12,0
- working	10,813,2	818,0	7,515,0
Average current in standby			
mode * A	0,4	0,2	
Average current operational			
mode * A	1,5		
Maximal current * A	5,0	1,5	

\*- values mentioned at a nominal supply voltage

\*\*-optional

The manufacturer reserves the right to change the packaging, specifications and appearance without notice

# 4. Product design

## **Turnstile housing**

Turnstile housing and arms are made of brushed stainless steel. The turnstile can be equipped with an integrated card collector upon request. In the upper part of the housing there is a removable cover with lock for quick access to the motherboard where PS, RC and ACS cables are connected. In the stands there are holes for cable routing (Fig. 1). They are located either behind card collector shutters or turnstile stands.



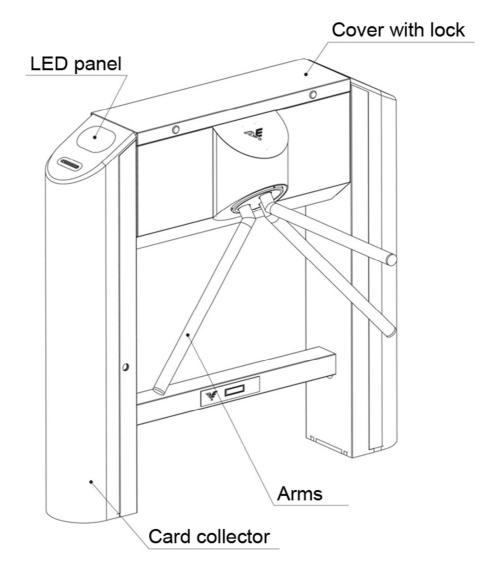


Fig. 1 General view of turnstile

## **LED** panel

Display system of turnstile consists of 2 panels. The panels are made of artificial stone with insertions made of acrylic glass. Turnstile operating modes are displayed on the panel in the form of mnemonic signs depicting authorization and non-authorization of passage (Fig. 2).



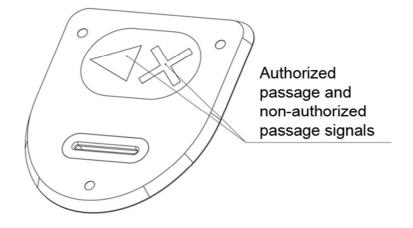


Fig. 2 General view of LED panel

# **Remote Control**

The housing of RC is made of polished stainless steel. On the front side there are control buttons and LED indicators of RC operational modes (Fig. 3). The standard supplied cable is 5 m long.

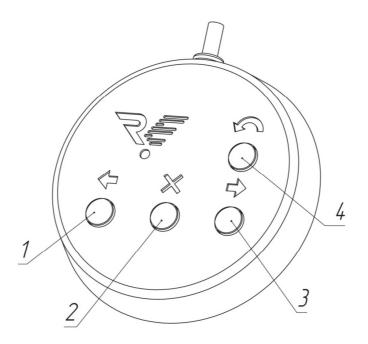


Fig. 3 General view of RC panel.



#### 5. Transportation and storage

Turnstile in its original packaging shall be transported by air, by road and by railroad with protection from direct exposure to rain and dust without range limitation. It is allowed to stack boxes in 2 rows during transportation and storage if Euro-pallets used. Keep the turnstile in dry (no moisture condensation) heated places within +1 to + 40 °C temperature range. Avoid vapors of acids, alkalis, and corrosive gases at the storage place. Storage of turnstile in the original package in a dry unheated premises or closed transport containers is permitted for short periods, no more than 3 days. Before startup, the turnstile must be kept in a room with normal climate conditions for 12 hours after storage in unheated rooms.

Packaging dimensions 1220x550x1220 mm (HxWxL)

## 6. Safety requirements

CAUTION! Failure to comply with the safety requirements specified in this section may result in damage to human life and health, total or partial loss of workability of products and (or) auxiliary equipment.

CAUTION! Installation of turnstile must be carried out by qualified personnel according to the instructions.



CAUTION! The producer disclaims any liability for damage to human life and health, total or partial loss of workability of products and (or) auxiliary equipment for non-compliance of the safety requirements specified in this section, as well as terminate the product warranty.

# IT IS NOT ALLOWED TO:

- Set the power supply inside the case of turnstile as this could lead to electric shock to persons;
- Set the turnstile other than in dry and heated places;
- Impede or accelerate the turnstile arms during "antipanic" mode;
- Apply chemically aggressive cleaning detergents (as pastes and liquids) to the materials of the housing

# 7. Description of card collector

## 7.1. Card collector purpose

Card collector (Fig. 4) is designed for collection and storage of proximity access cards at the exit from the facility. Flexible logic of the controller allows the integration of the card reader with any access control systems.



# 7.2. Product design

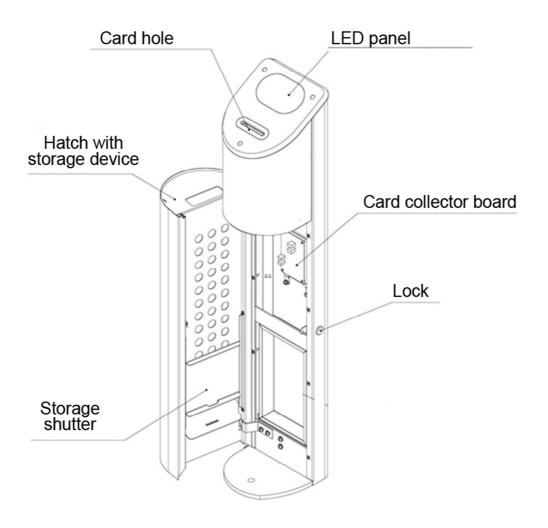


Fig. 4 General view of card collector

In front of the housing there is a hatch with lock for quick access to collected cards and to the board where PS, OD and ACS cables are connected. The hatch has card storage device where more than 500 cards can be stored.

ATTENTION (!) Reader is not included in the delivery set. Customer can choose reader model suitable for the existing system.



The reader is mounted on a universal adjustable bracket, located under the top cover of the card collector. This solution provides maximum flexibility for installation and connecting of the card collector.

#### 7.3. Removing guest cards from card collector

7.3.1. Open the hatch lock of card collector with a key (Fig. 4).

7.3.2. Put a bag to collect cards (not supplied) underneath storage device.

7.3.3. Lift the storage shutter to remove cards.

7.3.4. Lower the storage shutter and close the hatch with a key.

#### 8. Turnstile operation

#### 8.1. Turning on

CAUTION! Before connecting the turnstile make sure that the rotation area is free from people and foreign objects in order to avoid injuries and locking of the turnstile.

Connect power supply unit to 220V power network and turn it on. Turnstile will make one complete arms circle. One arm will set in the initial position, red cross indicator will turn on on the LED panel (Fig. 2), button 2 on RC panel (Fig. 3) will turn red. The turnstile is ready for operation.



#### 8.2. Operating modes

The turnstile has several modes of operation. The desired mode is set by using RC panel or ACS. Operational modes displayed on the panel in the form of mnemonic signs depicting authorization and non-authorization of passage.

#### 8.3. Control with remote control panel

General view of RC is shown in Fig. 3. Above each button there is an LED indicator displaying operational mode of the turnstile.

#### The "Stop" mode

"Stop" mode is set when the turnstile is turned on. Switch from another mode to "Stop" is performed by pressing button 2, in this case LED indicator above button 2 turns red. In this mode the passage is non-authorized in both directions. Central arm can be deflected from its initial position on a small angle. The stopper will be turned on automatically and will not let the arm to rotate for passage, and then the arm will return to its original state.

#### Single passage mode

Button 1 (3) turns on single passage mode to the left (right). This mode allows one pass to the left (right) with a subsequent changing to "Stop" mode. Green arrow indicator turns on the display showing a free passage



to the left (right). Green LED indicator on the RC panel turns on above the button corresponding to the authorized passage and a red indicator - above button 2. If the passage is not performed within 5 seconds, the turnstile switches to "Stop" automatically.

#### Multiple passage in one direction mode

In order to switch to this mode press and hold button 2 and then press button 1 (3). After that release both buttons. Multiple pass mode is displayed on the RC panel by green light above the button 1 (3). Red LED indicator above button 2 is off. Arrow indicator on the LED panel shows the direction of the authorized passage. In this mode the passage is allowed in the authorized direction for an unlimited number of times. It is also possible to authorize a single pass into the non-authorized direction by pressing button 1 (3). After this passage or within 5 seconds turnstile will return to the original mode.

#### Free passage mode

In order to switch to this mode it is required to press and hold button 1, then press 3 and release both buttons. In this mode passage is allowed in both directions for an unlimited number of times. Arrow indicators on the LED panel blink in both directions. Green LED indicators on the RC panel turn on above the buttons 1 and 3.

#### "Antipanic" mode

This mode is turned on by pressing button 4 while in any other mode.



Red cross indicator on the LED panel blinks for a few times and then the turnstile begins rotating and folding arms. In this mode the turnstile folds all the arms; arrow indicators on LED panel flash for both direction. Yellow LED indicator on the RC panel turns on above the button 4.

# 8.4. Adjustment of remote control panel

Turnstile can be set in various directions in relation to the user. In some cases it is needed to reverse left / right passage buttons. This can be done by the following operations:

- Power off the turnstile;
- Press and hold left (1) and right (3) buttons;
- Turn on the turnstile;
- Press button 2 while still holding buttons 1 and 3;
- Release buttons 1 and 3;
- Release button 2.

Now when you click left button passage will be allowed to the right and vice versa. The current functions of the buttons are saved and do not reset when power is turned off. In order to return to the initial modification re-do the above sequence.

# 8.5. Control with card collector

The card collector is set in the standby mode after power-up. It is necessary to present access card to switch the mode.



#### Passage with permanent cards

When an authorized permanent visitor card is presented to the reader card collector unlocks the speedgate for the time specified by ACS controller (depending on the operating mode; for 5 seconds in pulse mode). During the specified time interval other cards are not accepted. When the passage is performed or the specified time interval is expired card collector switches into standby mode and can collect the next card. Green arrow turns on on the LED panel, indicating the authorization of the passage.

#### Passage with guest cards

Guest card shall be inserted into the card hole up to the stop otherwise it will be ignored. In case the presented card is authorized, the card collector collects it and then unlocks OD for 5 seconds.

#### <u>Storage device is full</u>

When the storage device is overfilled, the card collector stops collecting guest cards and provides four short audio signals at intervals of 4 sec., the LED panel flashes red cross indicator at an interval of 4 seconds. Audio signal lasts for 3 minutes; then red cross on LED display continues single blinks 1 time in 2 sec. Passages with permanent cards are performed normally. In order to switch the card collector in the standard operating mode, remove cards from the storage device (see. Article 7.3).



#### Emergency mode

During the operation of the card collector there might be a situation when a card or a foreign object becomes jammed by shutter of the card collector. To resolve such situations is an emergency mode.

- Open the hatch of the card collector using the key (Fig. 4);
- Press and hold BUT1 button on the board of the card collector (Fig. 5). When the button is pressed shutter is open forcedly and a continuous audio signal is performed;
- Remove the object that impedes the normal operation of the system;

Release BUT1 button and close the hatch with a key.

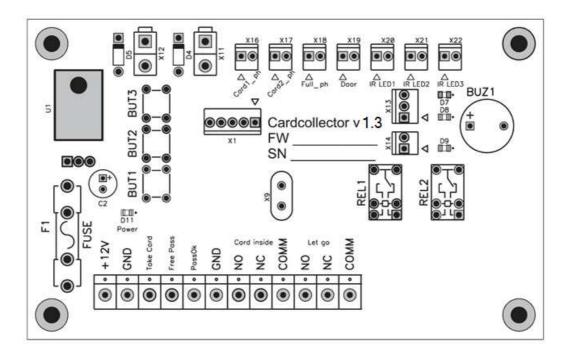


Fig. 5 General view of motherboard



# **Appendix 1. Troubleshooting for turnstile**

Table 6. Troubleshooting

Fault:	Remedy:
PS unit is connected, but	Check the connection cable;
the turnstile does not work	Check fuses on the motherboard
RC panel does not work	Check the RC connection;
	If +12 and GND contacts are connected
	properly try to interchange positions of CL
	and CH;
Turnstile works fine, but arms do not rotate when in "antipanic" mode	Check the supply voltage on the connectors of motherboard. If "antipanic" mode is on and voltage is lower than 10V, the motor will not work.
RC unit displays the status	Check jumper J2 on the motherboard (the
of the turnstile, but the	jumper must be removed. See article 5.4 of
turnstile does not respond	Installation guidelines)
to buttons pressing.	



# **Appendix 2. Troubleshooting for card collector**

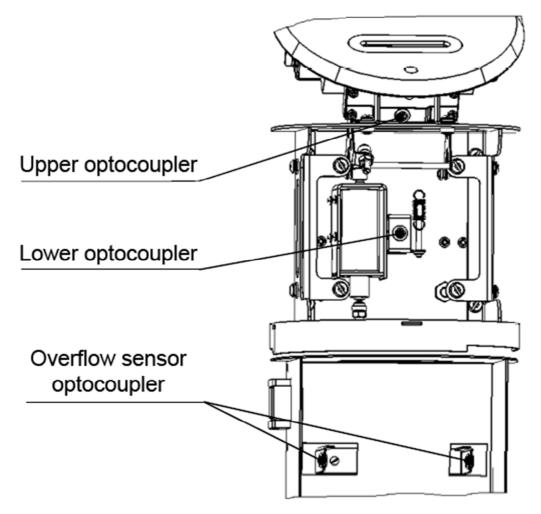


Fig 6. Location of optocouplers of card coll



# Table 7. Troubleshooting for card collector

Fault	Possible	Remedy
	causes	
PS unit is connected, but the card		Check the connection cable;
collector does not work		Check the fuse on board of the card collector;
	Storage device is full	Act in accordance with article 7.3;
		Check the condition of the cables and connectors;
nen red cross on the LED display (optocoup)	Overflow sensor ( <i>optocoupler</i> ) is broken (Fig. 6)	If D9 LED on the board of the card collector does not turn red – the fault is caused by the malfunction of motherboard; If D9 LED on the board of the card collector turns red:
		set the jumper on Full_ph connector - if LED D9 then goes off, the alarm stops, the Red Cross does not blink – the fault is caused by defective optocoupler;
		Check the voltage at the connectors (without removing the connectors, while holding down BUT1 button):
		<ol> <li>Full_ph (Vtyp = 0,15 B; Vmax = 2,5 V):</li> <li>If V ≤ 2,5 In - all right;</li> </ol>
		- If V> 2,5 V – disaligment or LED and phototransistor
		fault;
		- If $V = 5 V$ - the phototransistor or cable are defective;
		2. IR LED3 (Vtyp = 1,2 B):
		- If $V = 5 V$ - LED or cable defective;



		Act in accordance with the article 8.5, "Emergency mode".
Card collector provides 5 audio signals, red cross on the LED panel is blinking	Card or foreign object is left in card hole of card collector	
(then red cross on the LED display continues blinking, cards		Check the voltage at the connectors (without removing the connectors, while holding down the button BUT1)
are not collected, free passage		1. IR LED1 (Vtyp = 1,2 B):
mode is off).	Defective upper	- If $V = 5 V$ - LED or cable defective
	optocoupler	2. Card1_ph (Vtyp = $0,1$ B; Vmax = $2,5$ V):
	(Fig. 6)	- If V $\leq$ 2,5 In - all right;
		- If V> 2,5 V - disaligment or LED and phototransistor
		fault;
		- If $V = 5 V$ - the phototransistor or cable are defective;
		Check the voltage at the connectors (without removing the
		connectors, while holding down the button BUT1)
Card collector collects a guest	Defection lesson	1. IR LED2 (Vtyp = $1,2$ B):
card and provides an audio signal	Defective lower	- If $V = 5 V$ - LED or cable defective 1 Cord2 ph (Vtyp = 0.1 P; Vmov = 2.5 V);
for 1 second	optocoupler (Fig. 6)	1. Card2_ph (Vtyp = 0,1 B; Vmax = 2,5 V): - If $V \le 2,5$ In - all right;
	(118.0)	- If $V \ge 2.5$ W - disalignment or LED and phototransistor
		fault;
		- If $V = 5 V$ - phototransistor or cable are defective





OOO "Vozrozdenie" 192289 Saint Petersburg Sofiyskaya st., 66 Tel./fax +7 (812) 366 15 94 www.oxgard.com info@oxgard.com

